

## Radar detector mounting bracket install

1. Start by removing the two retainer clips, which hold the plastic cover on both sides of the interior light.
2. Take the Well Nuts and apply a tiny amount of glue to the flange. This is just to keep them from spinning when you start threading in the bolt.




3. Install the Well Nuts to the firewall and wait to let the glue dry. I used some super glue and let it sit over night. It helps to screw the bolt into the Well Nut a few turns and use it as a handle when gluing them into place. During the installation of mine I saw that the hole of the inner black plastic liner on one side did not align 100% with the hole in the firewall. Using the screw as a handle as described above and a small screwdriver to push the flange of the Well Nut behind the plastic liner made the process a lot easier.

This is what it looks like with the Well Nuts installed:



4. Bolt on the bracket together with the washer, spacer and stainless steel bolt and torque carefully. Be gentle and do not over torque!

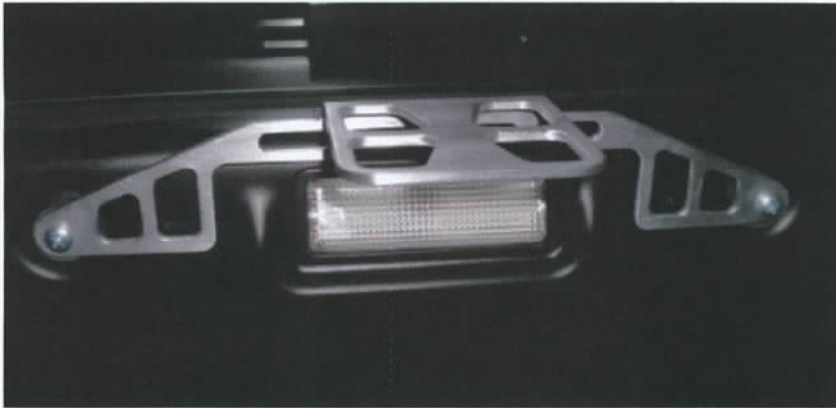

Steve...